



HOW TO INSTALL THE FIREBALL

1. The Fireball self-activates when it comes in contact with an open flame, and the aim is to put the fire out before it gets too big. Place the Fireball to limit pre-burn times.
2. Class A or C fire: 10-80 cm above hazard for maximum effectiveness.
3. Class C fire (electrical distribution point): 10 cm above the point
4. Class B fire: Wall-mount the Fireball 0,8 to 1 m above the flammable liquid – not lower. For stove-top installation, measure the installation height from the top of the pots on the stove, and NOT from the stove surface.
5. Class B fires: **NEVER** throw the ball into the fire/flammable liquid.
6. Make sure the WHITE arrow on the Fireball points upwards when placed in wall-mounted brackets.
7. Clean the ball every 6 months with a damp cloth, and check that ball is correctly placed in bracket (white arrow up).

FIRE BALL SA (PTY) LTD | REGISTRATION NO: 2017/237205/07
DIRECTORS: LE ROYE VAN DER MERWE & NIC MEYER

Call: 081 484 9374
Email: info@fireballrsa.co.za
Website: www.fireballrsa.co.za

Postal Address: P.O.Box 13184, Noordstad, Bloemfontein, Free State, 9302
Physical address: 6A Ambulance Road, Hilton, Bloemfontein, 9301

VAT: 465 027 8171



8. On activation, a Fireball can cover an area of 12 m².
9. If the fire is bigger than 12 m², or has been burning for more than 6 minutes, use two Fireballs for best results.
10. IMPORTANT: The Fireball is a secondary back-up device and does not replace conventional extinguishers in commercial applications.

Contact our risk assessment manager for suitable installation advice for your specific requirements.

FIRE BALL SA (PTY) LTD | REGISTRATION NO: 2017/237205/07
DIRECTORS: LE ROYE VAN DER MERWE & NIC MEYER

Call: 081 484 9374
Email: info@fireballrsa.co.za
Website: www.fireballrsa.co.za

Postal Address: P.O.Box 13184, Noordstad, Bloemfontein, Free State, 9302
Physical address: 6A Ambulance Road, Hilton, Bloemfontein, 9301

VAT: 465 027 8171